

## **ESTENAD WORKSHOP**

## **AUTONOMOUS MAINTENANCE PROCESS**

Make			DAILY	ONTHLY	
Model				AUTOALLI	
S/N					
Equip	Angle Grinder				
Sr. No.	Activity / Check List		Responsibility	Instructions	
1	Area of Operation		Operator	Machine and area around the machine is clean safety covers are in good condition	
2	Electrical connection		Operator	Check all electrical components	
3	Heavy Duty Livin 189 4-1/2* Angle Grinder 4-1/2* Angle Grinder 1-1/2* An	BOSCI 1022	Operator	Check the maximum RPM rating of wheel compatible with the RPM rating of the equipment	
4	Cleaning		Operator	Remove debris from external moving parts	

5	General Inspection	Operator	Check the machine is in good condition and ensure inspection tag
6	Discs against loosening	Operator / Electrician	Check and adjust the disc position and safety guards
7	Equipment inspection	Operator / Electrician	Ensure inspection sticker/tag on the equipment
8	Machine guarding    Lock BUTTON   POWER CORD	Operator / Electrician	Ensure guard is original to the machine and covers 180 degree of the wheel's periphery
9	Safety & Limit switches against loosening or damage	Operator / Electrician	All safety and limit switches functioning against loosening or damage must be verified
10	Terminal connections	Maintenance	Check the condition of the terminals, Check the components for dissolouration, fouling and heating effect.
11	General	Maintenance	Check all safety swiches and safety guards are fitted and function correctly